

Guarantee

This entitles you to have the music hall dac25.2 repaired or replaced, at our discretion, free of charge for one year after purchase, at any authorized music hall dealer, provided the unit was purchased from an authorized dealer. Your original sales receipt is used as proof of purchase date. Music hall can take no responsibility for defects arising from accident, misuse, abuse, wear and tear, neglect or through unauthorized repair and or adjustment. Neither can music hall accept responsibility for damage or loss occurring during transit to or from the person claiming under the guarantee.

Warranty

Your music hall dac25.2 warranty covers parts and labor costs for one year from the purchase date. After one year, you must pay for both parts and labor costs. The warranty does not cover transportation costs at any time.

Claims under guarantee

The unit should be packed in the original packing and returned to the dealer from whom it was purchased, or to an authorized music hall service center. It should be sent by a reputable carrier, carriage prepaid. Do not send the unit via USPS (United States Postal Service). No responsibility can be accepted for the unit while in transit to the dealer, customer, or authorized service agent, therefore, customers are advised to insure the unit against loss, damage, or theft while in transit.



FOR FURTHER INFORMATION CONTACT:

Music Hall
108 Station Road
Great Neck, NY 11023
Tel: 516-487-3663
Fax: 516-773-3891
<http://www.musichallaudio.com>

music hall

dac25.2

usb/tube digital to analog converter

INSTRUCTION MANUAL



music hall
<http://www.musichallaudio.com>

Congratulations on Your Purchase

You have selected a state-of-the-art digital-to-analog converter (DAC). Each component chosen for assembly and construction of the music hall dac25.2 was selected to provide you with superior performance and the highest level of sound reproduction available today. We know of no digital-to-analog converter that costs as much to produce that sells for so little. Please take a few moments to read over the instruction manual to ensure that you get the best performance from your unit and years of trouble-free service.

Safety Guidelines

This product is designed and manufactured to strict quality and safety standards. However, you should be aware of the following installation and operation precautions:

1. Take heed of warnings and instructions

Read all the instructions before connecting or operating the unit.

Keep this manual so you can refer to these safety instructions. Heed all warnings and safety information in these instructions and on the unit.

2. Water and Moisture

To reduce the risk of fire or electric shock, do not expose the unit to moisture or water. If the unit is exposed to moisture, immediately disconnect the power cord from the wall. Take the unit to an authorized music hall service center for inspection. Do not touch the unit, power cord, or plug with wet hands.

3. Object or liquid entry

Do not allow foreign objects or liquids into the unit. If this happens, immediately disconnect the power cord from the wall and take the unit to an authorized music hall service center for inspection.

4. Ventilation

You must allow 2 inches (5 cm.) of unobstructed clearance around the unit. Do not place the unit on a bed, sofa, rug, or similar surface that could block ventilation from the bottom. Do not stack another component on top of the amplifier. If the component is placed in a bookcase or cabinet, it must be ventilated to allow proper cooling.

5. Heat

Keep the unit away from naked flames, radiators, heat registers, stoves, or any other heat-producing appliances (including amplifiers).

6. Climate

The unit has been designed for use in moderate climates. Do not attempt to use below 41 degrees Fahrenheit (5 degrees Celsius) or above 95 degrees Fahrenheit (35 degrees Celsius).

7. Rack and Stands

Place the unit on a fixed, level surface strong enough to support its weight. Do not place it on a moveable cart that could tip over. We recommend only using stands approved for use with audio equipment.

8. Cleaning

Unplug the unit from the mains supply before cleaning. The case should normally require only a wipe with a soft lint-free cloth.

9. Power Sources

Only connect the unit to a power supply of the type and voltage described in the operating instructions or specified on the rear panel of the unit.

10. Power cord protection

Connect the unit to the power outlet only with the cord supplied. Do not modify the supplied cable in any way. Do not attempt to defeat grounding and/or polarization provisions. Do not use extension cords. Do not route the power cord where it will be crushed, pinched, bent at severe angles, exposed to heat, or damaged in any way.

11. Non-use periods

If the unit is to be left unused for a long period of time, the power cord should be unplugged from the wall outlet.

12. Damage Requiring Service

Stop using the unit immediately and have it inspected by an authorized music hall service center whenever:

1. The power supply cord or plug has been damaged.
2. Liquid has been spilled into the unit.
3. The unit has been exposed to rain.
4. The unit does not operate properly.
5. The unit has been dropped or damaged.
6. Smoke or any unusual smell is detected from the unit.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Getting Started

Thank you for purchasing the music hall dac25.2. The dac25.2 is a tube digital-to-analog converter (DAC) designed for the music lover. We chose a select group of technologically advanced components to create this sophisticated digital-to-analog converter. The dac25.2 can accept any coax (s/pdif), USB, XLR, or optical digital input from music hall's cd25.2 compact disc player, a CD/DVD transport, iPod transport, computer, media server, Sonos, Squeezebox, DVD in stereo, and will output two channel stereo analog. When used with your computer or in a top-end audio system, your music hall digital-to-analog converter will provide years of listening enjoyment.

The dac25.2 features the latest Texas Instruments (formerly Burr-Brown) PCM1796 24bit, 192kHz, advanced segment, stereo audio digital-to-analog converter. This processor features 123dB dynamic range, an 8 x oversampling digital filter, and just 0.0005% THD. The dac25.2 upsamples to either 96kHz or 192kHz; user selectable on the front panel. To achieve the best sound, we use an advanced asynchronous reclocking and anti-jitter control system upstream of the PCM1796 digital-to-analog converter. For this system, we are using the Philips 74HC574 in conjunction with the Texas Instruments SRC4192 Asynchronous Sample Rate Converter, whose master clock is a high precision active crystal oscillator. The dac25.2 also features a large, high current oversize power supply and a tube output for warm rich sound. A headphone output is provided for convenient personal listening.


A Few Precautions

Please read this manual carefully. In addition to installation and operating instructions, it provides valuable information that will help you get optimum performance from your system. Please contact your authorized music hall dealer for answers to your questions. In addition, all of us at music hall welcome your questions and comments. Save the shipping carton and all enclosed packing material for future use. Shipping or moving the unit in anything other than the original packing material may result in severe damage that is not covered by the warranty. Be sure to keep the original sales receipt. It is your best record of the date of purchase, which you will need in the event warranty service is required.

Placement

Use common sense when placing the dac25.2. Always place it on a firm, level surface. Make sure that the shelf or cabinet can support the weight. Ensure that there is adequate ventilation around all sides of the unit. Avoid placing the dac25.2 where it may be subject to excessive heat, such as near a heat register. Do not place anything on top of it. For best performance, avoid placing the dac25.2 where it may be subject to vibration, such as near a speaker.

Digital In - Connecting Source Components to the dac25.2

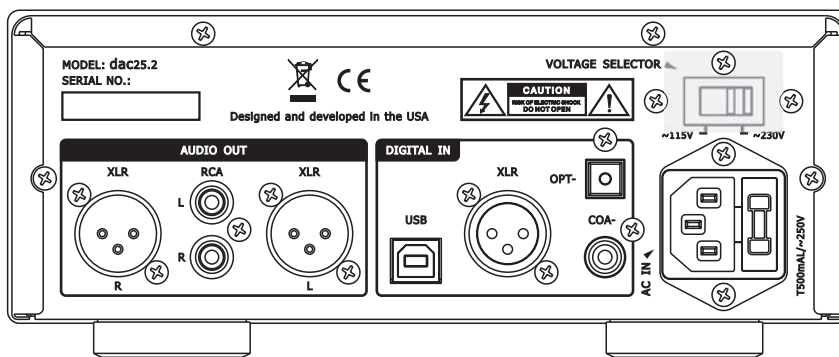

The dac25.2 has 4 digital inputs: coax (s/pdif), optical, USB, and XLR.

Connect your source components to the appropriate inputs on the back of the dac25.2. You can connect one or all four inputs at the same time. Choose between the inputs using the **input** selector button on the front panel.

Special note: When using the USB input with your computer; the dac25.2 and your computer should both be powered up. Your computer will recognize the new hardware and self install the necessary drivers.

Connect the USB cable to the dac25.2 from your computer prior to launching your audio player software: iTunes, Windows Media, Real Media, etc. If you haven't followed this instruction, close your audio player software, then re-launch.

You will probably find that setting your audio player's and computer's volume to max will sound best.

Apple Computer Users:

With both your computer and the dac25.2 powered on; connect the USB cable. Go to System Preferences → Sound → Output → choose the USB Audio DAC for output. Close System Preferences. Launch iTunes.

Audio Out


To avoid damage to the dac25.2, make sure it is **NOT** plugged into an AC outlet while connecting up or disconnecting either of the audio outputs. The dac25.2 has two sets of fixed audio outputs on the back. One single ended set labeled RCA: R and L. And one balanced set labeled XLR: R and L. Connect the RCA or XLR audio outputs to the correct audio inputs on your integrated amplifier, preamplifier, or receiver.

The phones (headphone) output on the front is variable.

Connecting to the Mains - Plugging In

Check that the Power Switch on the front of the dac25.2 is in the **off** position. Look at the **voltage selector** slider on the back of the unit and confirm that it is set for the correct voltage: (~115V USA/~230V Europe). Push the plug (IEC line socket) of the power cable supplied with the dac25.2 into the socket **AC IN** on back of the unit. Make sure it is pressed in firmly. Plug the other end of the power cable into an AC wall outlet.

Using the dac25.2

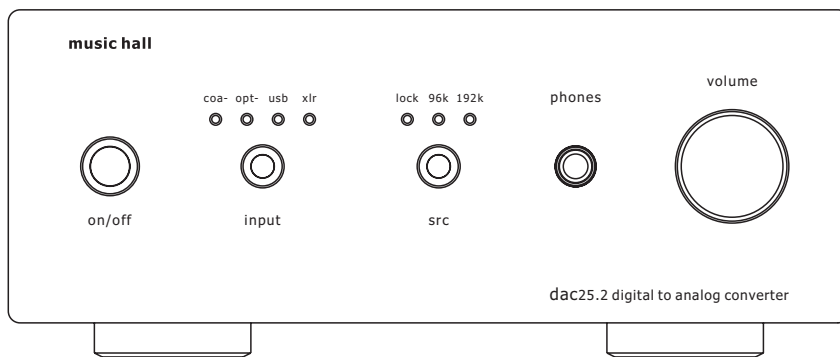

power - on/off

Push this button on the front of the dac25.2 to turn the unit **on**. Pushing it again will switch the dac25.2 **off**. When the dac25.2 is **on**; a blue light will appear on the front panel below the digital input that is currently active. If no digital input is active the **src** lock light will flash.

input

Use this button to toggle between the digital inputs: coa-, opt-, usb, xlr.

src (sample rate converter) - upsampling

Use this button to toggle between the different sample rates:

Lock: 16bit/44.1 (upsampling off - bypasses SRC4192)

96k: 24bit/96kHz (upsampling on 96kHz)

192K: 24bit/192kHz (upsampling on 192kHz)

Decide which sample rate sounds best on your system by listening.

phones

1/4" headphone output.

volume

Controls volume of the headphone output only.

Troubleshooting

If no sound comes out of the system with the dac25.2 connected, there are several areas to check. Either you are not getting an audio signal to your preamplifier, or you don't have a good digital source feeding the dac25.2.

First, check to make sure your preamplifier, integrated amp, or receiver is switched to the same input the dac25.2 is connected to. Test the connection and the cables to make sure. Keeping the input selected and using the same cable, connect this input to a known good source like a tuner or the analog output of a CD player. If that works, then it is most likely not a connection problem between the dac25.2 and the preamp, integrated amp, or receiver.

The next step is to check and see if the digital input is properly connected. Look on the front panel of the dac25.2 to see if the lock light is illuminated. If it is not, this is most likely the problem. Push the **input** selector and toggle through all the inputs to see if one locks. If one does not lock, you either have a bad digital cable or you aren't getting a good digital signal. Try replacing the digital cable on the input you've selected. For instance, if you are using a coax connection try replacing the coax cable with another coax cable. If this doesn't work, try selecting a different input (optical for instance) and try using the CD player's optical output with an optical cable instead.

If you are using a USB connection, it is necessary for the computer to recognize the dac25.2 as a connected device. Check in the computer's control panel under USB devices and see if the dac25.2 is recognized. If not, with both the dac25.2 and your computer powered up, remove the USB cable from the computer and then re-insert it. Watch the computer monitor for an indication it has found the hardware. Apple computers may not automatically recognize the dac25.2. Apple users check your System Preferences as suggested above.

If the lock light is lit and you're not getting any output, plug in a set of headphones and turn up the **volume** to hear if you're getting any output. If you are getting output through the headphones and you've verified that your cable is good and properly connected to the correct input on your preamp, integrated, or receiver, it's possible the tube is not properly seated in the tube socket or it has failed. If you are familiar with tubes and comfortable checking it, please do. If not, call your dealer or music hall for guidance.

